# User Manual

## PVS8370
## 7 in. Portable DVD Player

# SAFETY PRECAUTIONS

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE
AVIS
RISQUE DE CHOC ÉLECTRIQUE
- NE PAS OUVRIR
NE PAS EXPOSER CET APPAREIL À DE LA PLUIE OU DE L'HUMIDITÉ

*** SEE BOTTOM OF UNIT FOR GRAPHIC SYMBOLS ***

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.

CAUTION : USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION : DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

The lightning flash with an arrowhead within a triangle alerts you to uninsulated dangerous voltage within the product's enclosure that could cause an electric shock.

The exclamation point within a triangle alerts you to the presence of important operating, maintenance and servicing instructions in this user's manual.

**CAUTION**
INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM.

**CLASS 1 LASER PRODUCT**

This product contains a low power laser device.

The symbol for Class II (Double Insulation)

## ON PLACEMENT

- Do not use the unit in places that are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on carpeting.
- To avoid magnetized, do not place the unit near speaker or magnet.
- Do not use this unit in direct sunlight or leave the unit in a closed automobile (or yacht, etc) where it would be exposed to high temperatures above 104°F (40°C).
- No naked flame sources such as lighted candles should be placed on the AC power adapter and main unit.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

## ON SAFETY

- When connecting or disconnecting the AC power adapter, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power adapter.

## ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

## VENTILATION WARNING

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not operate the unit in a confined space, such as a bookcase or built-in cabinet, allow about 4 inch (10cm) of free space all around the unit for adequate ventilation.

## RATING PLATE LOCATION

- The rating plate is located on the bottom of unit.

## FCC STATEMENTS

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**WARNING:** Should any trouble occur, disconnect the AC power adapter and refer servicing to a qualified technician.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this device near water.
6. Clean only with dry cloth.
7. Do not block the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture , does not operate normally, or has been dropped.

# NOTES ON COPYRIGHT

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, or rent copyrighted material without permission.

Apparatus Claims of U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132 and 5,583,936 licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

# TABLE OF CONTENTS


***SAFETY INSTRUCTIONS*** ..... ***2***
***IMPORTANT SAFETY INSTRUCTIONS*** ..... ***3***
***NOTES ON COPYRIGHT*** ..... ***3***
***TABLE OF CONTENTS*** ..... ***4***
***DISC FORMATS*** ..... ***5***
***ACCESSORIES*** ..... ***6***
***CONTROL REFERENCE GUIDE*** ..... ***7***
***POWER SUPPLY*** ..... ***8 - 9***
Using the AC power adapter ..... 8
Using the car power adapter ..... 8
Using the built-in battery ..... 9
Turning on the unit ..... 9
***CONNECTIONS*** ..... ***10***
Connecting a TV ..... 10
Using headphones ..... 10
***SOUND SYSTEM*** ..... ***10***
***PLAYING A DISC*** ..... ***11 - 12***
Playing a disc ..... 11
Pausing playback (still mode) ..... 11
Stopping playback ..... 11
Fast forward / Fast reverse ..... 11
Skip (forward / reverse) ..... 11
Audio selection ..... 11
Subtitle selection ..... 12
Adjust the LCD screen ..... 12
***VIEWING JPG FILES*** ..... ***13***
***CUSTOMIZING THE FUNCTION SETTINGS*** ..... ***14***
Language setup ..... 14
Video setup ..... 14
System setup ..... 14
***MAINTENANCE*** ..... ***15***
Cleaning the disc ..... 15
Cleaning the unit ..... 15
Important note ..... 15
***TROUBLESHOOTING GUIDE*** ..... ***15***
***GFM GUARANTEE*** ..... ***16***

# DISC FORMATS

This unit can playback:

DVDs
[8cm/12cm disc]

audio cds
[8cm/12cm disc]

***JPG-CD***
picture viewer

***CD-R/CD-RW***
compatible

## REGION MANAGEMENT INFORMATION

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVD discs. If the region number printed on the DVD disc does not correspond to the region number of this unit, this unit cannot play that disc.

The region number of this unit is 1 .

## DISC FUNCTION OR OPERATION THAT IS NOT AVAILABLE

When the ⊘ symbol appears on the screen, it indicates that the function or operation attempted is not available at that time. This occurs because the DVD disc manufacturer determines the specific functions. Certain functions may not be available on some discs. Be sure to read the documentation provided with the DVD.

## ICONS USED ON DVDS

Sample Icons

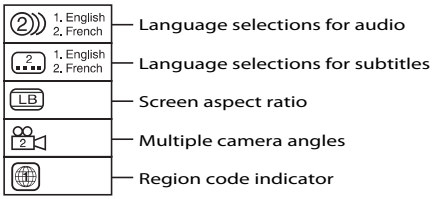


**Note:**
When playing back a CD-G (Graphics) or CD EXTRA disc, the audio portion will be played, but the graphic images will not be shown.

## TITLE, CHAPTER AND TRACKS

- DVDs are divided into **"titles"** and **"chapters"**. If the disc has more than one movie on it, each movie would be a separate **"title"**. **"Chapters"** are sections of titles.
- Audio CDs are divided into **"tracks"**. A **"track"** is usually one song on an Audio CD.

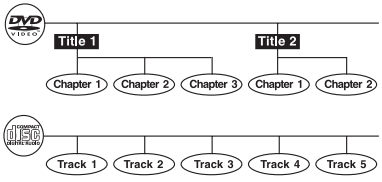


**Note:**
Numbers identify each title, chapter, and track on a disc. Most discs have these numbers recorded on them, but some do not.

## NOTES ON UNAUTHORIZED DISCS

You may not be able to play some DVD discs on this unit if they were purchased from outside your geographic area or made for business purposes.

# ACCESSORIES

PLEASE LOCATE THE INCLUDED ACCESSORIES.

- ☐ AC Power Adapter ..... x 1
- ☐ Car Power Adapter ..... x 1

**Specifications and appearance are subject to change without notice.**

# CONTROL REFERENCE GUIDE

UNIT

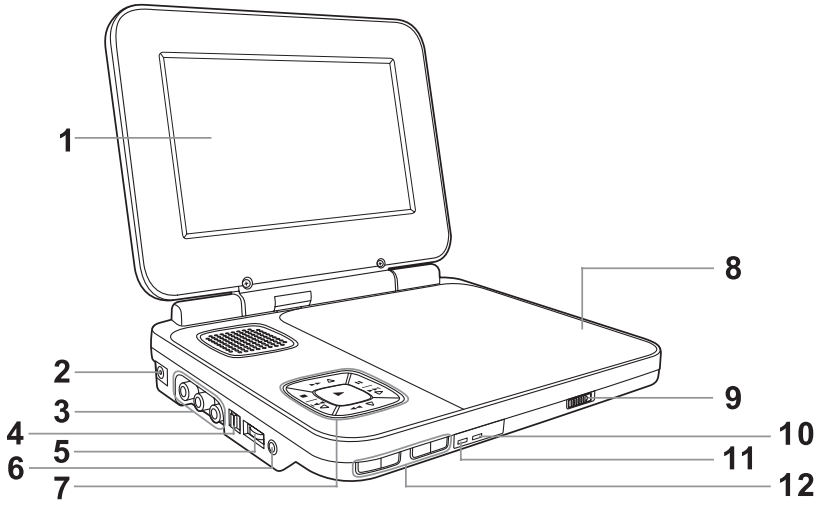


1) **LCD Screen**
2) **DC IN 9V - 12V Jack**
3) **AUDIO / VIDEO OUT Jacks**
4) **CHARGE / STANDBY(power off) / ON Switch**
5) **VOLUME Control**
   **Adjusts the volume.**
6) **Headphone Jack**
7) **Cursor ( △, ▽, ◁, ▷ ) Buttons**
   Highlights selections on a menu screen and adjusts certain settings.
   **► PLAY Button**
   Starts or resumes playback of a disc.
   Confirms selections on a menu screen.
   **■ STOP Button**
   Stops playing a disc.
   **II PAUSE Button**
   Press once to pause playback. Press subsequently to advance frame by frame on a DVD.
   **◄◄ SEARCH Button**
   Press to perform fast reverse playback on a DVD.
   Press and hold to perform fast reverse playback on an Audio CD.
   **►► SEARCH Button**
   Press to perform fast forward playback on a DVD.
   Press and hold to perform fast forward playback on an Audio CD.
   **⏮ PREV Button**
   Press to go back to the previous chapters on a DVD.
   Press and hold to skip to the previous tracks/JPG pictures on an Audio CD/JPG disc.
   **⏭ NEXT Button**
   Press to advance chapters on a DVD.
   Press and hold to skip to the next tracks/JPG pictures on an Audio CD/JPG disc.
8) **Disc Door**
   Close tray by pushing the disc door.
9) **Open Knob**
   Slide rightwards to open the disc door.
10) **ON Indicator**
11) **CHARGING Indicator**
    Charge the rechargeable battery before using it for the first time. The normal charging time should be completed in approximately 4-5 hours. The charging light will go out when the battery becomes fully charged.
12) **SETUP Button**
    Opens and closes the SETUP menu while in stop mode.
    Adjusts Brightness, Panel Display or Contrast of the LCD screen while in playback mode.
    **AUDIO Button**
    Selects one of the audio sound tracks programmed on a DVD or selects the audio output mode on an Audio CD.
    **SUBTITLE Button**
    Selects one of the subtitle languages programmed on a DVD.
    **MENU Button**
    Opens and closes the DVD menu.

# POWER SUPPLY

## A. USING THE AC POWER ADAPTER

The supplied AC power adapter operates on AC 120V.

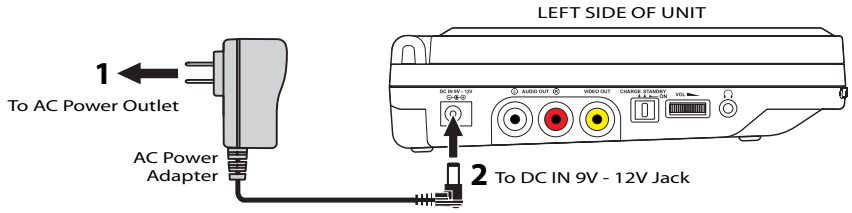


**Cautions:**

- The AC power adapter included with this unit is for its use only. Do not use it with other equipment.
- When the unit is not going to be used for long time, disconnect the AC power adapter from the AC power outlet.
- When the AC power adapter is plugged in, the apparatus is not completely disconnected from the main power supply, even when the power is turned off.

**Warning:**

The AC power adapter is used as disconnect device and it should remain readily operable during intended used. In order to disconnect the apparatus from the mains completely, the AC power adapter should be disconnected from the mains socket outlet completely.

## B. USING THE CAR POWER ADAPTER

The 12V car power adapter allows the unit to be used with vehicles that have a 12V, negative ground electrical system.

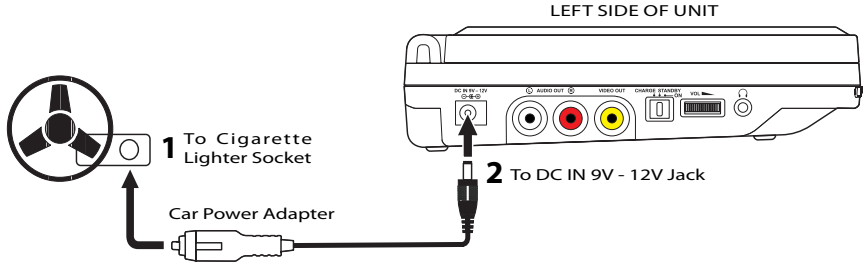


**WARNING:**
Disconnect the car power adapter when not in use. Not for use in 24V vehicles.

***CAUTION:***
For continued protection against risk of fire, replace only with same type and rating of fuse.

Fuse Replacement Instructions




**Cautions:**

- Use the provided 12V car power adapter only. Use with other car power adapters could damage the unit.
- The 12V car power adapter included with this unit is for its use only. Do not use it with other equipment.
- In the interest of traffic safety, do not operate this unit or view videos while driving a vehicle.
- Make sure the unit is securely fastened to prevent it from falling or flying through the air in the event of an accident.
- When the inside of the cigarette lighter socket is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the cigarette lighter socket before use.
- After use, disconnect the 12V car power adapter from both the unit and cigarette lighter socket.

## C. USING THE BUILT-IN BATTERY

The unit has a built-in, non-replaceable, rechargeable battery. Charge the built-in battery before using it for the first time. The normal charging time should be completed within 4-5 hours.
The green charging light will go out when the built-in battery becomes fully charged.

**To Recharge the Built-in Battery**

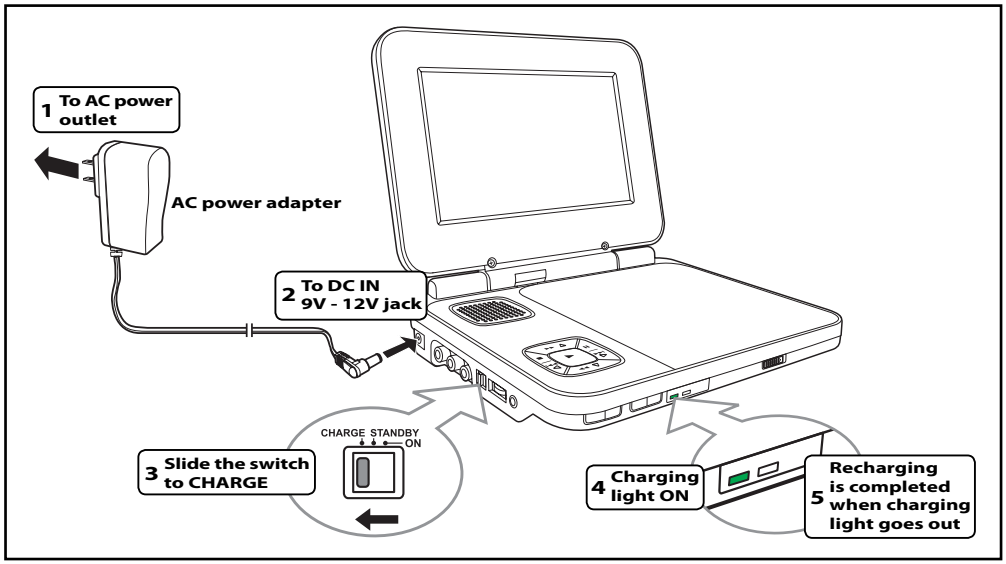
1 To AC power outlet
AC power adapter
2 To DC IN 9V - 12V jack
CHARGE STANDBY ON
3 Slide the switch to CHARGE
4 Charging light ON
5 Recharging is completed when charging light goes out

**Warnings:**
- The built-in battery can only be recharged when the unit is in CHARGE mode while using the AC adapter.
- The built-in battery cannot be recharged when the unit is in power ON mode.
- Do NOT recharge the built-in battery in the vehicle using the car power adapter.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**Notes:**
- When the built-in battery power is low, "Battery Low" will display on the screen and the unit will stop playing.
- Recharge the built-in battery when you are ready to use it again.
- While using the built-in battery, the environmental temperature should be 41°F (5°C) to 95°F (35°C).
- To get the longest service life of the built-in battery, charge at indoor-temperature.
- The built-in battery in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 212°F (100°C), or incinerate.
- The unit should not be exposed to excessive heat such as sunshine, fire or the like.
- When discarding the unit, environmental problems must be considered and local rules or laws governing the disposal of such products must be strictly followed.

## TURNING ON THE UNIT

1. Slide the **CHARGE / STANDBY / ON** switch on the left side of the unit to the ON position.
2. The DVD logo (start-up picture) will appear on the screen.
3. After use, slide the **CHARGE / STANDBY / ON** switch to the STANDBY (power off) position.

# CONNECTIONS

## A. CONNECTING A TV

If your TV has Audio/Video inputs, you can connect the unit to your TV using a standard Audio/Video cable (not included).

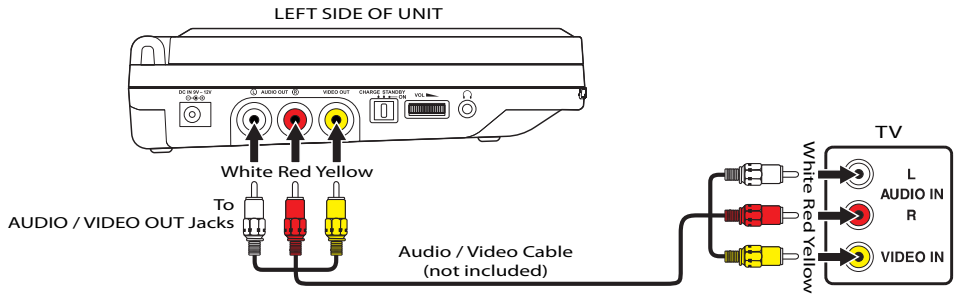


**Watching a DVD on your TV**

1. Turn on the unit.
2. Turn on the TV and follow the instructions included with it to play the DVD.

## B. USING HEADPHONES

- Turn down the volume before connecting, and then adjust the level.
- When headphones are connected, no sound will be emitted from the unit's speaker.

**Caution:**
Avoid listening to sound at levels which may be harmful to your ears.

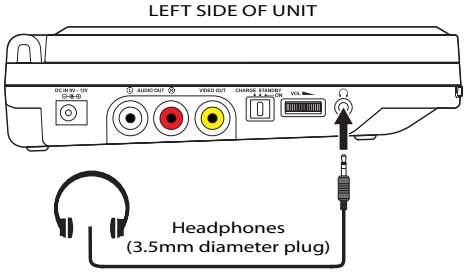


# SOUND SYSTEM

## DOLBY DIGITAL (FOR DVD)

Dolby Digital is a technology developed by Dolby Laboratories. Soundtracks encoded in Dolby Digital can reproduce from one to 5.1 discrete channels of excellent quality audio.

The unit automatically recognizes the Dolby Digital bitstream and provides a downmix suitable for two-channel listening. An additional Dolby Digital decoder is required for reproduction of the discrete multi-channel soundtracks available on many DVDs.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

DOLBY DIGITAL

# PLAYING A DISC

DVD CD

This owner's manual explains the basic instructions of this unit. Some DVDs are produced to limit operation during playback. For example, many DVDs do not allow users to skip government warnings, or in some cases previews or other features. This is not a defect in the unit. Refer to the instruction notes of discs.

" ⊘ " may appear on the screen during operation. A " ⊘ " means that the desired operation is not permitted by the unit or disc.

## PLAYING A DISC

1. Slide the **CHARGE / STANDBY / ON** switch on the left side of the unit to the ON position.
   **See CUSTOMIZING THE FUNCTION SETTINGS before proceeding to step 2.**
2. Slide the open knob rightwards to open the disc door.
3. Hold the disc by its sides and carefully place it onto the spindle with the label side facing up, pushing gently until you hear a "click".
4. Close the disc door. It takes a short while for your unit to load the disc. After loading, the unit will automatically bring you to the main menu of the DVD or start playing the DVD.
5. If the unit does not automatically start playing the DVD, press the ► **PLAY** button.

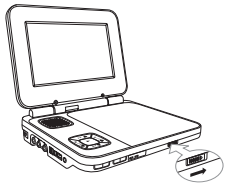

## PAUSING PLAYBACK (STILL MODE)

Press the **II PAUSE** button. To resume normal playback, press the ► **PLAY** button.
Each time you press the **II PAUSE** button, the picture advances one frame.

## STOPPING PLAYBACK

Press the ■ **STOP** button at the location where you want to interrupt playback. To resume playback at the position where the disc was stopped, press the ► **PLAY** button.
If you press the ■ **STOP** button twice, the unit's memory will be cleared and pressing the ► **PLAY** button will reset the DVD to the beginning.

## FAST FORWARD / FAST REVERSE

1. Press the **SEARCH** ▶▶ or ◀◀ **SEARCH** button when a DVD is playing. Each time you press the **SEARCH** ▶▶ or ◀◀ **SEARCH** button, the playback speed changes in the following sequence: (For an Audio CD, press and hold the **SEARCH** ▶▶ or ◀◀ **SEARCH** button to perform fast forward/reverse.)

▶▶ 2x → ▶▶ 4x → ▶▶ 8x → ▶▶ 16x  ◀◀ 2x → ◀◀ 4x → ◀◀ 8x → ◀◀ 16x

2. Press the ► **PLAY** button when you reach the desired point to resume normal playback.

**Notes:**
- The DVD player mutes sound and subtitles during reverse and forward scan of DVDs.
- The fast playback speed may differ depending on the disc.

## SKIP (FORWARD / REVERSE)

Press the ▶▶| **NEXT** button to advance chapters on a DVD.
Press and hold the ▶▶| **NEXT** button to skip to the next tracks on an Audio CD.
Press the |◀◀ **PREV** button to go back to the previous chapters on a DVD.
Press and hold the |◀◀ **PREV** button to skip to the previous tracks on an Audio CD.

## AUDIO SELECTION

On some DVDs, the sound is recorded in two or more formats. Follow the directions below to select the preferred language and sound system.
1. While a disc is playing, press the **AUDIO** button to show the current audio format number.

Audio 1/3:Dolby D 2ch English

2. Press the **AUDIO** button repeatedly to select the desired audio format.

**Notes:**
- If only one audio format is recorded on the DVD, the number does not change.
- Some DVDs allow you to change audio selections only via the disc menu. If this is the case, press the **MENU** button and choose the appropriate language on the disc menu.
- You can select different audio channels (Stereo, Mono Left, Mono Right or Mix-Mono) on an Audio CD by pressing the **AUDIO** button repeatedly.

## SUBTITLE SELECTION

1. While a DVD is playing, press the **SUBTITLE** button to display the current language setting, as shown in the example.

Subtitle 02/03:Spanish

2. Press the **SUBTITLE** button repeatedly to select the desired subtitle language. You can turn subtitles off by pressing the **SUBTITLE** button repeatedly until the " Subtitle Off " is displayed.

**Notes:**

- Some DVDs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- During some scenes, the subtitles may not appear immediately after you select your desired scene.
- The number of subtitle languages recorded differs depending on the disc. If only one language is recorded, the language does not change.
- This function can only be used for discs on which subtitles have been recorded in multiple languages.
- Some DVDs allow you to change subtitles only via the disc menu. If this is the case, press the **MENU** button and choose the appropriate subtitle on the disc menu.

## ADJUST THE LCD SCREEN

You can adjust Brightness, Panel Display (Wide 16:9 / Normal 4:3) and Contrast of the LCD screen in playback mode.

1. Press the **SETUP** button in playback mode.
2. Press the △ / ▽ button to select Brightness, Panel Display (Wide 16:9 / Normal 4:3) or Contrast.
3. Press the ◁ / ▷ button to change the setting.
4. Press the **SETUP** button to exit the menu.

# VIEWING JPG FILES

This unit can play JPG files recorded on a CD-R or CD-ROM disc (CD-RW is not recommended).

## VIEWING JPG FILES

1. Slide the open knob rightwards to open the disc door.
2. Hold a JPG file disc by its edges and gently push it onto the spindle with the label side facing up until you hear a "click".
3. Close the disc door. The JPG files on the disc will be displayed automatically or a folder list appears.
4. Press the ■ **STOP** button to display a folder list. Press the △ or ▽ button to highlight a JPG file to play. Press the ► **PLAY** button to start playback.

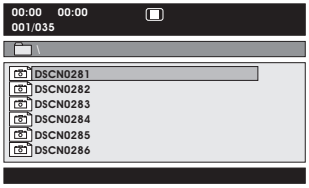


**Notes:**

- You can press the **II PAUSE** button to freeze the picture. Press the ► **PLAY** button to resume picture slide show.
- You can press and hold the ⏮ **PREV** or ⏭ **NEXT** button to change the picture.
- You can press the Cursor buttons (△, ▽, ◁, ▷) to rotate direction of the picture by 90°.
- Some discs may not permit this operation.

# CUSTOMIZING THE DVD FUNCTION SETTINGS

## LANGUAGE SETUP

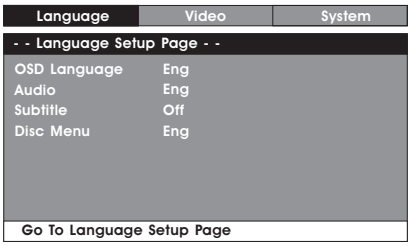


1. Press the **SETUP** button in stop mode.
2. Press the ▽ button to select Language Setup Page.
3. Press the △ / ▽ button to select the option (OSD Language, Audio, Subtitle or Disc Menu), then press the ▷ button.
4. Press the △ / ▽ button to select your preferred language, then press the ► **PLAY** button to confirm.
5. Repeat steps 3 and 4 to adjust other options. Press the ◁ button to return to the previous menu.
6. Press the **SETUP** button to exit the menu.

**Notes:**

- Some DVDs may not play in the audio language selected. A prior language may be programmed on the disc.
- Some DVDs may be set to display subtitles in a language other than the one you selected. A prior subtitle language may be programmed on the disc.
- Some DVDs allow you to change subtitle selections only via the disc menu. If this is the case, press the **MENU** button and choose the appropriate subtitle language from the selection on the disc menu.
- Some DVDs may not include your pre-selected language. In this case, the DVD player automatically displays disc menus consistent with the disc's initial language setting.

## VIDEO SETUP

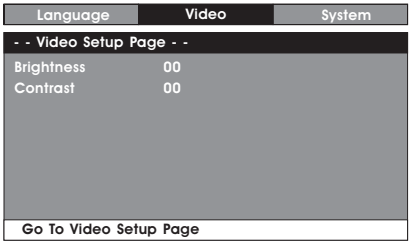


1. Press the **SETUP** button in stop mode.
2. Press the ◁ / ▷ button to select Video Setup Page.
3. Press the △ / ▽ button to select the option (Brightness or Contrast), then press the ▷ button.
4. Press the ◁ / ▷ button to adjust the setting, then press the ► **PLAY** button to confirm.
5. Repeat steps 3 and 4 to adjust other options. Press the ◁ button to return to the previous menu.
6. Press the **SETUP** button to exit the menu.

## SYSTEM SETUP

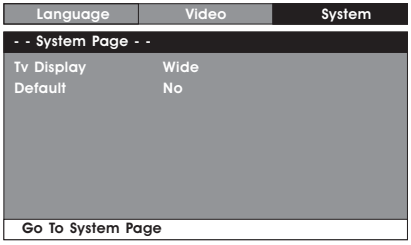


1. Press the **SETUP** button in stop mode.
2. Press the ◁ / ▷ button to select System Page.
3. Press the △ / ▽ button to select the option (TV Display or Default), then press the ▷ button.
4. Press the △ / ▽ button to adjust the settings, then press the ► **PLAY** button to confirm.
5. Repeat steps 3 and 4 to adjust other options. Press the ◁ button to return to the previous menu.
6. Press the **SETUP** button to exit the menu.

*TV Display*

Cut off when a wide-screen video image is played.

***Pan Scan***

- *When wide-screen video is played, this mode clips the right and left sides of the image so that it can be viewed on a conventional screen.*
- *Some wide-screen DVDs that do not permit Pan Scan mode playback are automatically played in letterbox mode (black bands that appear at the top and bottom of the screen).*

Pan Scan

***Letter Box***

- *When wide-screen video is played in this mode on a conventional screen, black bands appear at the top and bottom of the screen.*

Letter Box

***Wide Screen***

- *This is the correct mode for playing wide-screen videos on the unit screen or other external wide-screens.*

Wide Screen

**Notes:**

- The displayable picture size is preset on the DVD. Therefore the playback picture of some DVDs may not conform to the picture size selected.
- When you play DVDs recorded in the 4:3 aspect ratio, the playback picture will always appear in the 4:3 aspect ratio regardless of the TV display setting.
- Select Wide Screen to conform the LCD screen on the unit. Always be sure that your TV display conforms to the actual TV in use if you connect the unit to a TV.

*Default*

It takes 3-5 seconds to reset the DVD settings to the factory default.

# MAINTENANCE

## CLEANING THE DISC

A defective or soiled disc inserted into the unit can cause sound to drop out during playback.
Handle the disc by holding its inner and outer edges.

- Do NOT touch the surface of the unlabeled side of the disc.
- Do NOT stick paper or tape on the surface.
- Do NOT expose the disc to direct sunlight or excessive heat.
- Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.
- NEVER use solvents such as benzine or alcohol to clean the disc.
- Do NOT use irregular shaped discs (example: heart shaped, octagonal, etc.). They may cause malfunctions.

## CLEANING THE UNIT

- Be sure to turn the unit off and disconnect the AC power adapter before maintaining the unit.
- Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth that has been dipped in a weak soap-and-water solution and wrung out thoroughly, then wipe with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. Do NOT use compressed air to remove dust.

## IMPORTANT NOTE

Before transporting the unit, remove the disc from the disc compartment.

# TROUBLESHOOTING GUIDE

| SYMPTOM | CAUSE (AND REMEDY) |
|---|---|
| No power. | • Ensure the AC adapter is connected.<br>• The unit is not turned on. |
| No sound or only a very low-level sound is heard. | • Make sure that you select ON mode.<br>• The system is in pause mode. Press the ► **PLAY** button to return to normal play mode.<br>• The unit is in fast-forward or fast-reverse mode. Press the ► **PLAY** button to return to normal play mode.<br>• Make sure the AUDIO/VIDEO output connections are correct.<br>• The DTS DVD disc cannot be decoded to have speaker output.<br>• The unit is too hot; shut off the unit for 30 minutes to cool it down. |
| No picture. | • The region number of the disc doesn't match the region number of this unit.<br> |
| The picture is not clear. | • Clean the disc.<br>• The disc is scratched.<br>• Please adjust the LCD's brightness and contrast by the **SETUP** button in playback mode. |
| Severe hum or noise is heard. | • The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.<br>• Clean the disc. |
| The disc does not play. | • There is no disc inside. (“No Disc” appears on the screen).<br>• Insert the disc correctly with the playback side facing down.<br>• Clean the disc.<br>• The unit and disc region number are incompatible.<br>• Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again. |

# GFM GUARANTEE

## GFM Guarantee

If you are not totally satisfied with this GFM product, you may return it to any Meijer store for a full refund within 6 months (180 days) of purchase when accompanied by a receipt.

For customer support please call (866) 845-9436 or go to www.gfmproducts.com

Dist. by Wholesale Merchandisers, Inc.,
2929 Walker, NW
Grand Rapids, MI 49544
Made in China

Printed in China
811-837091W060